


Reduction gear case oil servicing

To check the oil level, loosen the check plug ① and ensure that the oil level is flush with the edge of the check hole. If the oil level is below this point, add the designated oil from the filler hole by removing the oil filler cap ② until oil just begins to flow from the check hole.

Recommended Oil:

SAE 10W - 40 or SAE 10W - 30

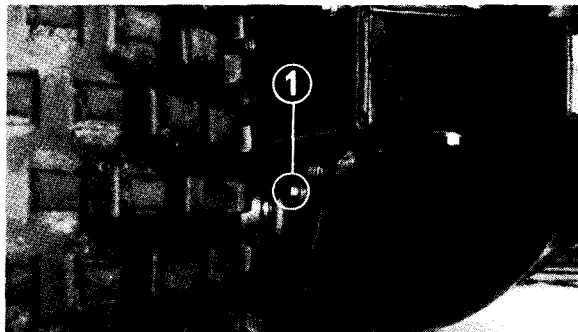

Entretien de l'huile de la boîte de démultiplication

La vérification du niveau d'huile s'effectue en desserrant le bouchon de sécurité ① et en s'assurant que le niveau d'huile affleure le bord du trou de sûreté. Si le niveau se trouve au-dessous de ce point, faire l'appoint avec l'huile recommandée jusqu'à ce que l'huile commence à sortir du trou de sûreté.

Huile recommandée:

SAE 10W - 40 ou SAE 10W - 30

