


Top and Side Compartments

To open the top compartment (1), insert the ignition key and turn it clockwise.

The tool compartment is located inside.

Remove the tool compartment and turn the knobs (3) counterclockwise to open the left or right side compartment (2).

Tighten the knobs (3) securely when closing the side compartments. The top compartment is a two step latch type. Make sure that the top compartment is locked by pushing it down.

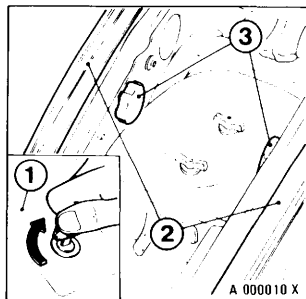

Compartimientos superior y lateral

Para abrir el compartimiento superior (1), inserte la llave del encendido y hágala girar en el sentido de las manecillas de un reloj.

El compartimiento para guardar las herramientas está situado dentro del compartimiento superior. Saque el compartimiento de herramientas y haga girar los botones (3) en el sentido inverso de las manecillas de un reloj para abrir el compartimiento lateral izquierdo o derecho (2).

Apriete los botones (3) firmemente al cerrar los compartimientos laterales.

El compartimiento superior es de tipo con un cerrojo de dos pasos. Asegúrese de que el compartimiento superior esté bloqueado bien empujándolo hacia abajo.