


To adjust the front suspension air pressure:

Press and hold the Suspension Selector Button to FRONT (1): to increase air pressure, press the Air Pressure INCREASE (3) button; to decrease air pressure, press the DECREASE (4) button.

To adjust the rear suspension air pressure:

Press and hold the Suspension Selector Button to REAR (2): to increase air pressure, press the Air Pressure INCREASE (3) button; to decrease air pressure, press the DECREASE (4) button.

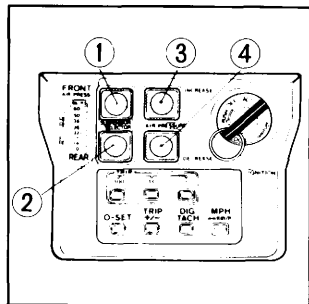

---

Para ajustar la presión del aire de la suspensión delantera:

Pulsar y mantener el botón selector de suspensión en FRONT (1): para aumentar la presión del aire, presiónese el botón de aumento de presión INCREASE (3); para disminuir la presión del aire, presiónese el botón de disminución DECREASE (4).

Para ajustar la presión del aire de la suspensión trasera:

Pulsar y mantener el botón selector de suspensión en REAR (2): para aumentar la presión del aire, presiónese el botón de aumento de presión INCREASE (3); para disminuir la presión del aire, presiónese el botón de disminución DECREASE (4).