


## Maintenance Indicator

When the mileage of on your motorcycle approaches the specified maintenance interval for engine oil and filter change, the indicator will change from gree to yellow. The motorcycle should be serviced when the indicator turns yellow.

The indicator (1) will change to red if it is not reset and the specified maintenance period is exceeded.

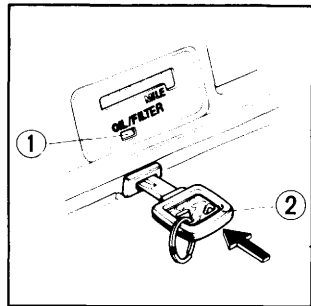

---

## Indicador de mantenimiento

Cuando el número de millas de su motocicleta se aproxime al tiempo de mantenimiento fijado para el cambio de aceite y filtro de su motor, el indicadora cambiará de verde a amarillo. Dichos cambios se han de efectuar cuando el indicador se torna amarillo.

El indicador (1) cambiará a rojo si no se ha ajustado y se ha sobrepasado el período de mantenimiento.