


### Manual Search UP Button/Clock Minute Adjust (3):

The frequency display moves up the scale when this button is pressed. Release the button to stop at a selected frequency. This button is also used to set the Minutes on the clock.

### Manual Search DOWN Button/Clock Hour Adjust (4):

The frequency display moves down the scale when this button is pressed. Release the button to stop at a selected frequency. This button is also used to set the Hours on the clock.

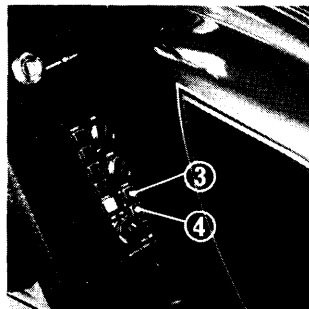

---

### Botón UP de búsqueda manual/ajuste de los minutos del reloj (3):

En indicador de frecuencias mueve la escala hacia arriba cuando se aprieta este botón. Suéltese el botón para parar en la frecuencia escogida. Este botón se usa también para fijar los minutos en el reloj.

### Botón DOWN para la búsqueda manual/ajuste de las horas del reloj (4):

En indicador de frecuencias mueve la escala hacia abajo cuando se presiona este botón. Suéltese el botón para parar en la frecuencia escogida. Este botón se usa también para fijar las horas en el reloj.

