

Muting Switch (9):


Switching the Mute switch ON instantly lowers the radio's volume so you may hear surrounding sounds more clearly. Switching Mute OFF restore the radio to its original volume.

Auto Seek Switch (10):

Pushing and releasing this switch tunes the radio to the next higher frequency or station. Pushing and holding the switch scans up the radio scale.

WARNING:

- Do not adjust controls or reset tuning while riding. Keep both hands on the handlebars while riding.
- Do not turn up the volume so loud that emergency vehicles or traffic cannot be heard.

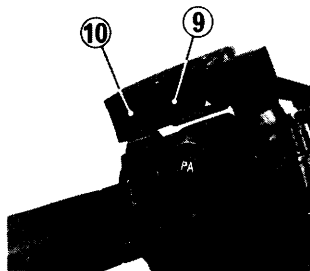

Interruptor de silenciamiento (9):

Conectando el interruptor de silenciamiento en ON se baja el volumen de la radio instantáneamente de tal manera que Ud. podrá oír los sonidos de su alrededor de un modo más claro.

Interruptor de búsqueda automática (10):

Pulsando y liberando este interruptor se sintoniza la radio en la frecuencia o emisora inmediatamente superior. Pulsando y manteniendo presionado el interruptor busca en la escala de la radio.

ATENCIÓN:

- No regule ni fije los controles mientras conduzca. Mantenga ambas manos en el manillar mientras conduzca.
- No ponga el volumen tan alto que no le permita oír los vehículos de emergencia o el tráfico.