


Theft prevention:

This radio is mounted so that the main radio unit and control unit are separate. If you intend to leave your motorcycle for a long period of time, the control unit can be detached and taken with you.

Detaching the control unit:

1. Insert the ignition key (11) into the lock and turn it clockwise.
2. While holding the key, pull it firmly toward you. Once the unit is about one-third withdrawn, pull it up and detach it from the fairing.
3. Attach the blind panel (12).

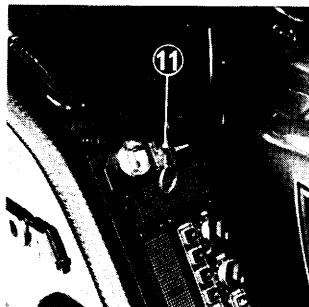

Antirrobo

Esta radio está montada de tal manera que la unidad de la radio principal y la unidad de control están separadas. Si Vd. desea estacionar su motocicleta por un período largo de tiempo, puede retirar y llevarse la unidad de control.

Como retirar la unidad de control:

1. Introducir la llave de encendido (11) en la cerradura y girarla en sentido de las agujas del reloj.
2. Mientras mantenga la llave, tire fuertemente de la misma hacia sí. Una vez que ha retirado la unidad en un tercio aproximadamente, tire totalmente y sepárela del carenado.
3. Coloque la tapa cegadora (12).

