


Top Compartment

Use the ignition key to open the top compartment covers. The tool tray (1) is under the forward cover. The owner's manual and other documents should be stored in the plastic bag in this tray. When washing your motorcycle, be careful not to flood the compartment.

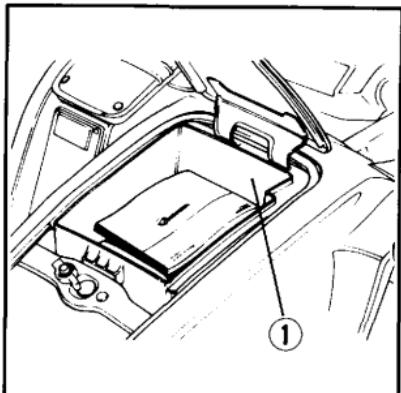

Seat

The seat can be set to three position. To adjust, open the top compartment cover, pull the seat adjust lever (2) while pressing the seat lock spring (1) and move the seat. After adjustment, make sure the seat is secure and your riding position is comfortable.

Compartimiento de arriba

Use la llave de contacto para abrir las cubiertas del compartimento de arriba. La bandeja para herramientas (1) se encuentra debajo de la cubierta delantera. Guarde el manual de explicaciones y otros documentos en un saco de plástico en esta bandeja. Cuando lava la moto, preste atención de no inundar el compartimiento.

Asiento

El asiento puede fijarse en tres posiciones. Para ajustarlo, abra la cubierta de compartimiento superior, tire de la palanca de ajuste del asiento (3) precionando el resorte de seguro del asiento (2) y desplace el asiento. Despues de realizar el ajuste, asegúrese de que el asiento esté firme y su posición de manejo sea cómoda.

