

Fairing Pockets


The left fairing pocket (1) can be used by unsnapping the cover.

To remove the right pocket lid (2), insert the ignition switch key (3), turn it clockwise and pull the lid.

To attach the pocket lid, slide the front end of the lid over the fairing and push the rear end down.

WARNING:

- Fairing pockets are for light weight items. Do not exceed 2 kg (5 lbs) each side.
- Do not open fairing pocket lid while riding motorcycle.

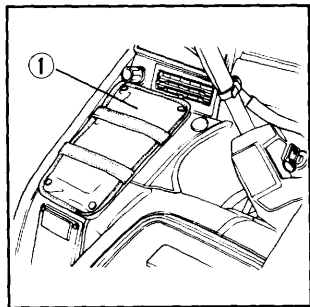

Bolsas

La bolsa de la izquierda (1) puede utilizarse desabrochando la cubierta.

Para sacar la tapa de la bolsa de la derecha (2), insertar la llave del conmutador de arranque (3), girarla hacia la derecha y tirar de la tapa. Para unir la tapa de la bolsa, deslizar el extremo frontal de la tapa sobre la bolsa y presionar el extremo posterior.

ATENCION:

- Las bolsas son para objetos de poco peso. No transportar más de 2 kg en cada lado.
- No abra la tapa de la bolsa mientras monta en la motocicleta.

