


## ACC Terminal

The ACC terminal (1) is in the fuse box (2) in the top compartment and provides 12V DC power for electrical accessories. A maximum of 120 Watts (10 amps) may be connected to the terminal. Higher current demands may blow the fuse or discharge the battery.

Review the **LOADING AND ACCESORIES WARNING** (pages 14–24) before installing accessories.

Connect accessory electrical leads securely, and keep them insulated, away from hot parts and sharp edges.

**CAUTION:** Do not exceed 3amps for prolonged current demand.

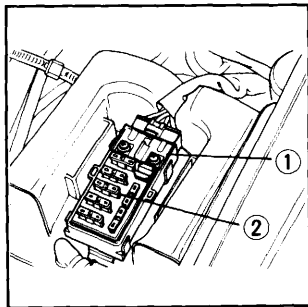

---

## Terminal ACC

El terminal ACC (1) está en la caja de fusible (2) situada, a su vez, en el compartimiento de arriba y suministra una tensión de 12V, c.c. como energía para los accesorios eléctricos. El máximo de 120 vatios (10 amperios) puede conectarse a este terminal. Las demandas de corriente más altas podrán fundir el fusible o descargarán la batería.

Revisar el **ATENCIÓN DE CARGA Y ACCESORIOS** (páginas 14–24) antes de instalar los accesorios.

Conectar los hilos eléctricos de los accesorios con seguridad, y mantenerlos aislados, separados de partes calientes y de bordes afilados.