

Auto Volume Control Knob (1):


This function increases the volume as the speed of the motorcycle increases.

Turning the knob clockwise raises the operating level. Set the knob at the center position under the normal condition and then adjust the volume control for desired sound level.

Tone Control Knob (2):

Turning this knob clockwise emphasizes treble, turning it counter-clockwise decrease the treble and emphasizes bass.

It is usually set at the center position.

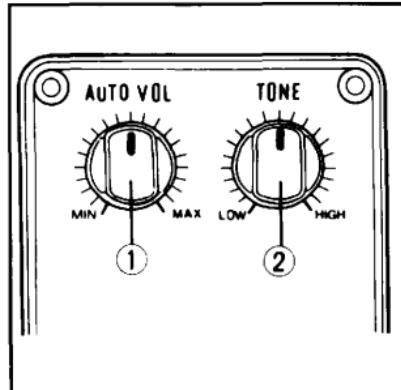

Mando de control de volumen (1):

Esta función aumenta el volumen según aumenta la velocidad de la motocicleta.

Girando el mando hacia la derecha se aumenta el nivel del sonido. Poner el mando en la posición central, bajo condición normal, y luego ajustar el control del volumen para obtener el nivel de sonido deseado.

Mando de control de tono (2):

Al girar este mando hacia la derecha se acentúan los tonos agudos. Girándolo hacia la izquierda disminuyen los tonos agudos y aumentan los graves.

Generalmente se deja en la posición central.