


## Clutch

This motorcycle has a hydraulic clutch. There are no adjustments to perform but the clutch system must be inspected periodically for fluid level and leakage. If the control lever freeplay becomes excessive and the motorcycle creeps or stalls when shifted into gear or if the clutch slips, there is probably air in the clutch system and it must be bled out. See your Honda dealer for this service.

### Fluid level:

Check that the fluid level is upper the lower level line (1). If the fluid level is near the lower level line, it indicates the fluid is leakage. See your authorized Honda dealer for replacement.

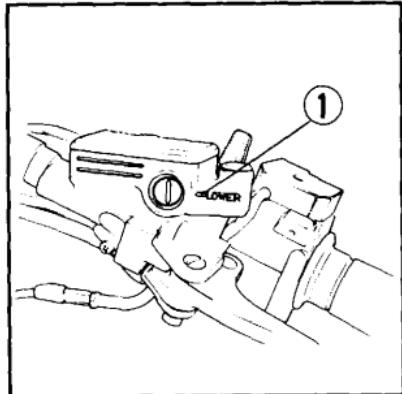

## Embrague

Esta motocicleta tiene un embrague hidráulico. No se necesita efectuar ajuste alguno sin embargo, el sistema deberá inspeccionarse periódicamente por si hubiese pérdidas y para comprobar el nivel del líquido. Si el juego libre de la palanca de control fuese excesivo y la motocicleta se desliza o detiene cuando se cambia de velocidades o si el embrague palináse, esto se deberá probablemente a la presencia de aire en el sistema del embrague. El aire deberá purgarse y para ello será necesario ponerse en contacto con el concesionario de Honda autorizado.

### Nivel del líquido:

Comprobar que el nivel del líquido este sobre la marca inferior (3). Si el líquido estuviese por debajo de la marca inferior, esto indicaría una fuga de combustible. Póngase en contacto con su concesionario autorizado de Honda para efectuar las reparaciones necesarias.