

Air pressure

Check and adjust air pressure when the front fork tubes is cold before riding.


1. Place the motorcycle on its center stand (See page 84).

Do not use the side stand, or you will get false pressure readings.

Raise the front wheel off the ground by using a jack under the engine.

2. Remove the front fork air valve cap (1). Check the air pressure.

NOTE: Some pressure will be lost when removing the gauge from the valve. Determine the amount of loss and compensate accordingly.

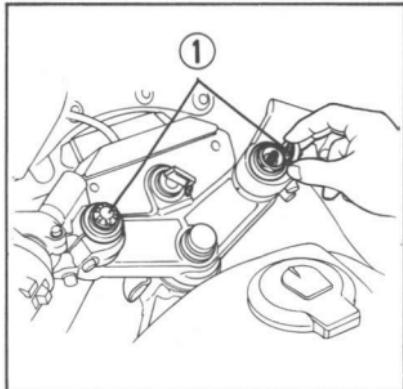

Pression

Vérifier la pression avant de prendre la route lorsque les tubes plongeurs de fourche avant sont froids.

1. Placer la machine sur sa béquille centrale (Voir page 84).

Ne pas utiliser la béquille auxiliaire car l'on obtiendrait de fausses indications.

Décoller la roue avant du sol à l'aide d'un criollo placé sous le moteur.

2. Enlever le capuchon de valve d'air de fourche avant (1). Vérifier la pression.

NOTE: De l'air s'échappera lorsqu'on enlèvera le manomètre de la valve. Déterminer la quantité d'air qui s'est échappée et compenser.