

## MAINTENANCE


### Transmission Oil

#### Oil change:

Change the transmission oil when specified by the Maintenance Schedule.

**NOTE: Change transmission oil with the engine warm and the motorcycle held upright to assure complete and rapid draining.**

1. To drain the oil, remove the two screws (1) attaching the lower fairing.
2. Turn the six clips (2) 90° counterclockwise, then remove the fairing.

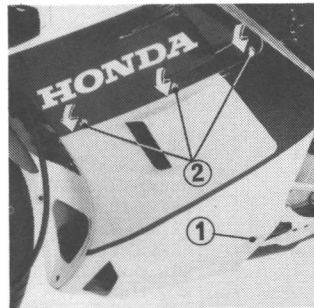

---

## ENTRETIEN

### Huile de boîte de vitesses

#### Renouvellement de l'huile:

Renouveler l'huile de boîte de vitesses à la fréquence indiquée dans le Tableau d'entretien.

**NOTE: Renouveler l'huile avec le moteur à chaud et la machine à la verticale. Ceci permettra d'effectuer une vidange plus complète et plus rapide.**

1. Pour vidanger l'huile, déposer les deux vis (1) fixant le carénage inférieur.
2. Tourner les six agrafes (2) de 90° dans le sens inverse des aiguilles d'une montre, puis retirer le carénage.