


4. Pull out the element with holder (4).
  5. Separate the holders (5) by releasing the plug (6) and remove the element (7).
  6. Wash the element in non-flammable or high flash point solvent and let it dry thoroughly.
- WARNING: Never use gasoline or low flash point solvents for cleaning the air cleaner element. A fire or explosion could result.**
7. Soak the element in clean gear oil (SAE 80 or 90) until saturated. Then squeeze it to remove the excess.
  8. Install the air cleaner element, by reversing the removal procedure.

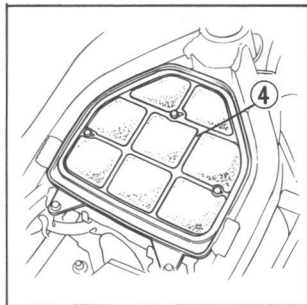

4. Sortir l'élément avec le support (4).
  5. Séparer le support (5) en libérant le bouchon (6) et retirer l'élément (7).
  6. Laver l'élément filtrant dans un solvant propre non inflammable ou à point d'éclair élevé, puis bien le laisser sécher.
- ATTENTION: Ne jamais utiliser de l'essence ou des solvants à point d'éclair bas pour nettoyer l'élément du filtre à air. En effet, cela pourrait occasionner un feu ou une explosion.**
7. Tremper l'élément filtrant dans de l'huile pour engrenages propre (SAE 80 ou 90) jusqu'à ce qu'il en soit imbibé. L'essorer ensuite pour en faire sortir l'huile en excès.
  8. Pour la repose de l'élément du filtre à l'inverse de la dépose.

