


- If the adjuster is threaded out near its limit or the correct free play cannot be obtained using the cable adjuster (4) make a major adjustment. Loosen the lock nut (3) and turn in the cable adjuster (4) completely. Tighten the lock nut (3) and pull on the rubber dust cover.
- At the lower end of the cable, loosen the lock nut (5). Turn the adjusting nut (6) to obtain the specified free play. Tighten the lock nut (5), and check the adjustment.

- (A) Decrease free play
(B) Increase free play

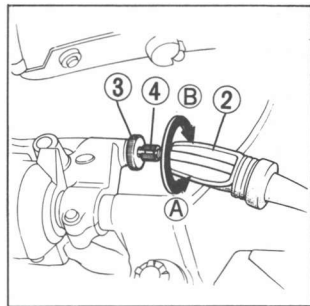

- Si le tendeur (4) ne permet pas d'obtenir la garde recherchée procéder à un réglage important. Desserrer le contre-écrou supérieur (3) et visser à fond le tendeur (4). Resserrer le contre-écrou supérieur (3) et remettre le cache-poussière en caoutchouc.
- A l'extrémité inférieure du câble, desserrer le contre-écrou (5). Tourner l'écrou de réglage (6) sorte à obtenir la garde spécifiée. Resserrer le contre-écrou (5), et vérifier le réglage.

- (A) Pour diminuer le jeu libre
(B) Pour augmenter le jeu libre

