


## Front Wheel Removal

1. Raise the front wheel off the ground by placing a support block under the engine.
2. Disconnect the speedometer cable (1) by removing the speedometer cable set screw (2).
3. Remove the front fork cover (3) by removing the fixing bolt.
4. Remove the right caliper assembly (4) from the fork leg by removing the fixing bolts (5).

**CAUTION:** Support caliper assembly so that it doesn't hang on the hose. Do not twist the brake hose.

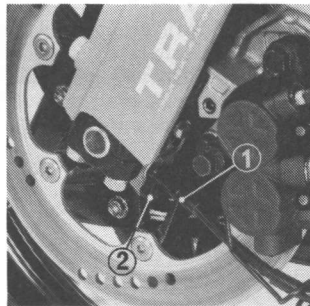

---

## Dépose de la roue avant

1. Surélever la roue avant en plaçant une cale de support sous le moteur.
2. Désaccoupler le câble (1) du compteur de vitesse après avoir retiré sa vis (2) de fixation.
3. Déposer le cache de fourche avant (3) en retirant le boulon de fixation.
4. Déposer l'ensemble d'étrier droit (4) de la patte de fourche en retirant les boulons de fixation (5).

**PRÉCAUTION:** Soutenir l'ensemble d'étrier de sorte qu'il ne pende pas du flexible. Ne pas tordre le flexible de frein.

