


4. Remove the oil filter (8) with a filter wrench and let the remaining oil drain out. Discard the oil filter.
5. Make sure that the sealing washer on the drain plug is in good condition and install the plug.
6. After completely draining the oil, apply a thin coat of engine oil to the new oil filter rubber seal (9) and install the new oil filter. Oil filter torque: 15–20 N·m (1.5–2.0 kg·m, 11–14 ft·lb)
7. Fill the crankcase with 3.2 liter (3.4 U.S. qt., 2.8 Imp.qt.) of the recommended oil (page 90).

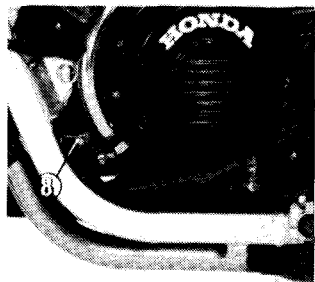

4. Déposer le filtre à huile (8) avec une clé à filtre et laisser s'écouler l'huile restante. Mettre le filtre à huile au rebut.
5. S'assurer que la rondelle d'étanchéité du bouchon de vidange est en bon état et reposer le bouchon.
6. Une fois la vidange d'huile achevée, appliquer une mince couche d'huile moteur sur le joint en caoutchouc neuf (9) et poser le filtre à huile neuf.  
Couple de serrage de filtre à huile: 15–20 N·m (1,5–2,0 kg·m)
7. Remplir le carter moteur de 3,2 litres de l'huile recommandée (voir page 90).

