


Front and Rear Brakes – Brake fluid:

The fluid reservoirs are located at the right handlebar bracket for the front brake and inside the right side cover for the rear brake.

The brake fluid level in the reservoir must be maintained between the upper (1) and lower (2) level marks. Whenever the level falls near the lower level mark (2), check the brake pads for wear (see page 140). If the brake pad wear does not exceed the limits, this will usually indicate fluid leak. Consult nearest Honda dealer.

Recommended brake fluid: DOT3 or DOT4

CAUTION: Do not adjust the rear brake pedal height. Consult nearest Honda dealer for this adjustment.

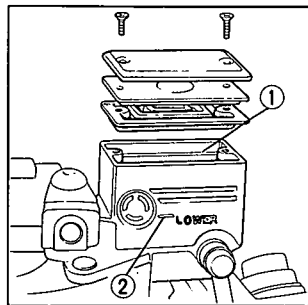

Freins avant et arrière — Fluide de frein:

Les réservoirs de fluide de frein se trouvent sur le support du guidon du côté droit pour le frein avant et dans l'intérieur du couvercle latéral du côté gauche pour le frein arrière.

Le niveau de fluide de frein du réservoir doit être maintenu entre la marque maxi (1) et la mini (2). Toutes les fois que le niveau tombe au-delà de la marque du niveau mini (2), vérifier l'état d'usure des sabots de frein (voir page 140). Si l'usure des sabots de frein ne dépasse pas la limite, ceci indique d'habitude une fuite du fluide. Dans tel cas, consulter votre concessionnaire HONDA le plus proche. Fluide de frein recommandé: DOT3 ou DOT4

PRECAUTION: Ne pas procéder au réglage de la hauteur de la pédale du frein arrière, mais confier ce travail au concessionnaire HONDA le plus proche.

