


Air Cleaner Servicing

The air cleaner should be serviced at regular intervals (page 100).
When riding in dusty areas, more frequent service may be necessary.

1. Remove the right and left covers by pulling them out by hand.
2. Remove the seat (see page 72).
3. Turn the fuel valve OFF and disconnect the fuel tube and vacuum tube (1) (auto fuel valve — rear cylinder intake port) at the fuel valve.
4. Remove the fuel tank (2) by removing the front and rear mounting bolts (3) and pulling the tank towards the rear.

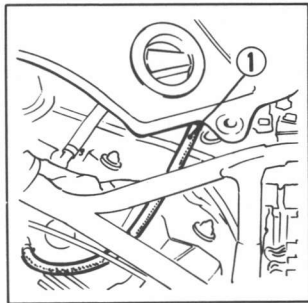

Entretien du filtre à air

Le filtre à air doit être entretenu à des intervalles réguliers (page 102).
Si la machine est utilisée dans des endroits poussiéreux, un entretien plus fréquent pourra être nécessaire.

1. Déposer les caches latéraux droit et gauche en les tirant à la main.
2. Déposer la selle (voir la page 72).
3. Placer le robinet d'essence sur OFF et désaccoupler le tuyau d'essence et le tuyau de dépression (1) (robinet d'essence automatique — lumière d'admission de cylindre arrière) au niveau du robinet d'essence.
4. Déposer le réservoir d'essence (2) en enlevant les boulons de montage avant et arrière (3) et en tirant le réservoir vers l'arrière.

