


Valve Tappet Clearance

The checking or adjusting of the tappet clearance should be performed while the engine is cold.

1. Drain the coolant from the radiator (see page 176).
2. Remove the right and left side covers and remove the seat.
3. Turn the fuel valve OFF and remove the fuel tank. Remove the spark plug caps.
4. Disconnect the overflow tube at the radiator filler neck.
5. Disconnect the fan motor wire coupler from the wire harness.
6. Loosen the upper and lower radiator hose bands.
7. Remove the radiator mounting bolts (1) and remove the radiator (2).

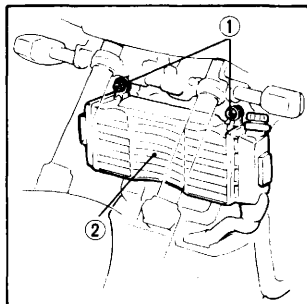

Jeu aux poussoirs

Le contrôle et le réglage du jeu aux poussoirs doivent être effectués avec le moteur à froid.

1. Vidanger le liquide de refroidissement du radiateur (voir page 176).
2. Retirer les caches latéraux droit et gauche et déposer la selle.
3. Fermer le robinet d'essence (OFF) et déposer le réservoir d'essence. Déposer les capuchons des bougies d'allumage.
Déposer les capuchons de bougie.
4. Désaccoupler le tuyau de trop plein au niveau du goulot de remplissage du radiateur.
5. Déconnecter le coupleur de fils du ventilateur et le faisceau de fils.
6. Desserrer les colliers supérieur et inférieur de la durite de radiateur.
7. Retirer les boulons de montage du radiateur (1) et déposer le radiateur (2).