


7. Remove the ignition coil mount bolt (7) and remove the ignition coil with the bracket. Remove the inner plate (8) by removing the attaching bolt (9).
8. Disconnect the overflow tube from the radiator. Disconnect the cooling fan motor wire coupler.
9. Disconnect the thermo unit wire coupler.
10. Loosen the hose bands and remove the radiator upper and lower hoses from the radiator.
11. Remove the two bolts attaching the radiator upper mount. Remove the one bolt attaching the radiator lower mount.
12. Remove the radiator.
13. Remove the front and rear cylinder heads cover (10) from the cylinders by removing the four hold-down bolts from each.

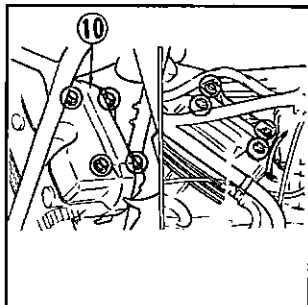

7. Déposer le boulon de fixation (7) de la bobine d'allumage et déposer cette dernière avec son applique. Déposer la plaque intérieure (8) en déposant le boulon de fixation (9).
8. Déconnecter le tuyau de trop-plein au niveau du radiateur et déconnecter le coupleur de fils du moteur de ventilateur de refroidissement.
9. Déconnecter le coupleur de fils de l'unité thermo.
10. Libérer les fixations de flexible et déposer les flexibles supérieur et inférieur du radiateur.
11. Déposer les deux boulons maintenant la fixation supérieure du radiateur. Déposer aussi le boulon maintenant la fixation inférieure du radiateur.
12. Déposer le radiateur proprement dit.
13. Déposer les couvercles (10) avant et arrière des soupapes aux cylindres en enlevant les quatre boulons sur chaque.

