


### Outer pad:

Replace the pad with a new one if the surface A (back of the brake pad) aligns with the surface B as shown.

If either pad is worn beyond the above limit, both pads must be replaced. Make sure there are no fluid leaks. Check for deterioration or cracks in the hose fitting.

**NOTE:** Use only genuine Honda replacement friction pads offered by authorized Honda dealers or its equivalent. When the brake service is necessary, consult your Honda dealer.

- |               |                |                |
|---------------|----------------|----------------|
| (A) Surface A | (5) Brake Pad  | (7) Range      |
| (B) Surface B | (6) Brake disc | (8) Wear limit |

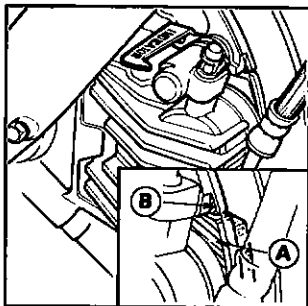

### Plaquette extérieure:

Remplacer la plaquette par une neuve si la surface A (arrière de la plaquette de frein) coïncide avec la surface B comme illustré.

Si une des deux plaquettes est usée jusqu'à la limite, les deux devront être remplacées. S'assurer qu'il n'y a aucune fuite de liquide. Vérifier également la détérioration ou les fissures éventuelles du flexible et de l'attache.

**NOTE:** Utiliser uniquement des plaquettes de friction Honda d'origine, fournies par un concessionnaire Honda officiel ou des pièces équivalentes. Quand un entretien des freins s'avère nécessaire, consulter un concessionnaire Honda.

- |               |                        |                    |
|---------------|------------------------|--------------------|
| (A) Surface A | (5) Plaquette de frein | (7) Plage          |
| (B) Surface B | (6) Disque de frein    | (8) Limite d'usure |

