


## Front Wheel Removal

1. Disconnect the speedometer cable (1) by unscrewing the meter cable set screw (2).
2. Remove the front brake cover setting nuts and bolts (3).
3. Raise the front wheel off the ground by placing a support block under the engine.
4. Remove the axle holder (5) by removing the axle holder nuts (4). Remove the axle.
5. Remove the brake disk cover and brake caliper assy with the brake disc from the front wheel hub.

**CAUTION:** Do not hang the front brake caliper assy to damage the brake hose. Support them by suitable block.

6. Remove the front wheel.

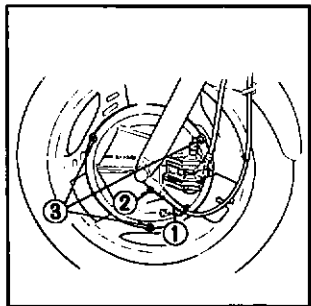

## Dépose de la roue avant

1. Débrancher le câble de compteur de vitesse (1) en dévissant sa vis (2) de serrage.
2. Retirer les écrous et boulons (3) de fixation de coquille de frein avant.
3. Décoller la roue avant du sol en glissant une cale poeuseuse sous le moteur.
4. Déposer les demi-paliers de bridage (5) en retirant leurs écrous (4) Déposer l'axe de roue (6).
5. Déposer les coquilles de frein ainsi que les ensembles d'étrier solidaires des disques eux-mêmes.

**PRECAUTION:** Ne pas laisser les ensembles d'étrier de frein avant pendre au bout des flexibles de frein mais plutôt les faire reposer sur un socle approprié.

6. Déposer la roue avant.

