


Fuse Replacement

The fuse box (1) is located between the handlebars. Main fuse (3) is installed beside the battery. When frequent failure of the fuse occurs, it usually indicates a short circuit or an overload in the electrical system. Consult your Honda dealer.

WARNING: Never use a fuse with a different rating from that specified on the fuse box and never use conductive material to replace a fuse.

CAUTION: Turn the ignition switch OFF before checking or replacing fuses to prevent accidental short-circuiting.

- | | |
|---------------|---------------------|
| (1) Fuse box | (2) Spare fuses |
| (3) Main fuse | (4) Spare main fuse |

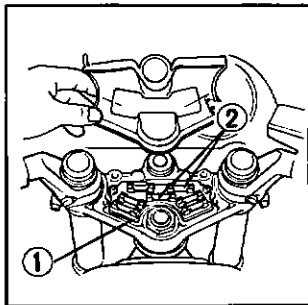

Remplacement des fusibles

La boîte de fusibles (1) se trouve entre les guidons. Le fusible principal est monté à côté de la batterie. Lorsque le fusible saute souvent, ceci indique un court circuit ou une surcharge du système électrique. Dans tel cas, consulter votre concessionnaire HONDA.

ATTENTION: Ne jamais utiliser des fusibles ayant une intensité différente de celle spécifiée sur la boîte de fusibles et ne jamais substituer des fusibles par les autres matériaux conducteurs.

PRECAUTION: Avant de contrôler ou de remplacer le fusible, tourner l'interrupteur d'allumage sur "OFF". Ceci permettra d'éviter des courts-circuits accidentels.

- | | |
|-----------------------|-----------------------------------|
| (1) Boîte de fusibles | (2) Fusible de rechange |
| (3) Fusible principal | (4) Fusible principal de rechange |