


### **Oil change and oil filter cleaning:**

Drain the oil while the engine is still warm.

1. Remove the oil filler cap.
2. Place an empty oil drain pan under the engine and then remove the drain plug (1).
3. Operate the kick starter several times to aid in complete draining of the remaining oil.
4. Remove the kick starter pedal and brake pedal.
5. Remove the clutch cable end from the clutch arm.
6. Remove the right crankcase cover by unscrewing the screws.

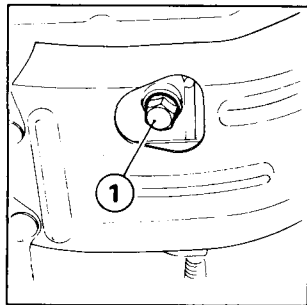

---

### **Cambio de aceite y limpieza del filtro de aceite:**

Drene el aceite mientras que el motor esté todavía caliente.

1. Quite la tapa de llenado de aceite.
2. Coloque un recipiente de aceite debajo del motor, luego, quite el tapón de drenaje (1).
3. Haga jugar el kickstarter varias veces para acelerar la purga del aceite restante.
4. Quite el pedal del kickstarter y el del freno.
5. Quite el extremo del cable de embrague desde el brazo de embrague.
6. Desmonte la cubierta del cárter derecho destornillando los tornillos.