To Connect/Disconnect Available Functions Individually
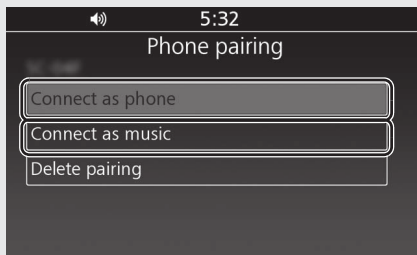
Depending on the connected device, this function may not be able to establish a connection.

① Select [Bluetooth setting], and then press ⊙ or ENT switch.
② Select [Phone pairing], and then press ⊙ or ENT switch to enter the setting menu.
③ Select the paired device, and then press ⊙ or ENT switch.
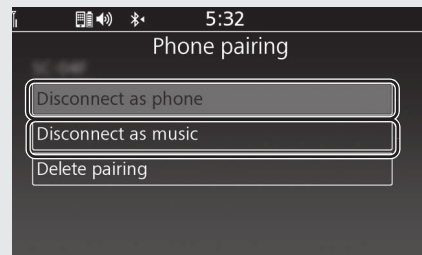
When the function is unavailable:
④ Select [Connect as phone] or [Connect as music], and then press ⊙ or ENT switch.

⑤ Icons of available functions next to the name of the device turn on.

When the function is unavailable:
④ Select [Disconnect as phone] or [Disconnect as music], and then press ⊙ or ENT switch.

⑤ Icons of available functions next to the name of the device turn off.