IDLE SPEED

Refer to the Safety Precautions on page 61 .

The engine must be at normal operating temperature for accurate idle speed adjustment. Ten minutes of stop-and-go riding is sufficient.

1. Warm up the engine, place the scooter on its center stand.
2. Connect a tachometer to the engine.
3. Adjust idle speed with the throttle stop screw (1).
   Idle speed (In neutral):
   1,800 ± 100 min^{-1} (rpm)

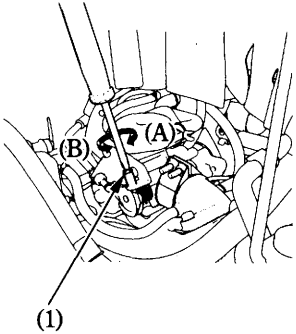

(1) Throttle stop screw (A) Increase
(B) Decrease