

## Installation:

1. Position the front wheel between the fork legs and insert the axle (4) from the left side through the left fork leg and wheel hub.
2. Align the index line (6) of the axle shaft with the surface (7) of fork leg.
3. Tighten the axle bolt (5) to the specified torque.

Front axle torque:

59 N•m (6,0 kgf•m)

4. Tighten the axle pinch bolt (3) on the right fork leg to the specified torque:

22 N•m (2,25 kgf•m)


5. Install the right and left caliper assembly to the fork legs and tighten the fixing bolts (2) to the specified torque:

30 N•m(3,1 kgf•m)

To avoid damaging the brake pads while installing the caliper assembly, carefully fit both brake disks between the pads.

Take care not to damage the ABS sensor (if present) on the right caliper. (CBF1000A)

6. Temporarily tighten the axle pinch bolt (3) on the left fork leg until lightly seat.

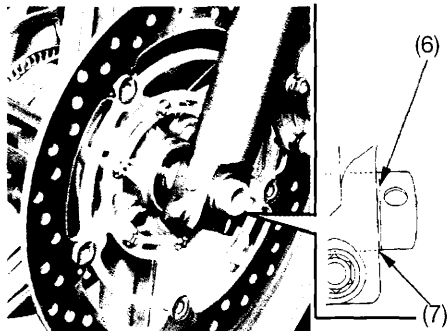

(6) Index line

(7) Surface