


# Subframe Upright Position


## Installation

1. Loosen the subframe mounting upper bolt (1).
2. Loosely attach the lower ends of the subframe (2) to the mainframe while connecting the air cleaner connecting tube to the carburetor. Then align the subframe with the rear wheel and tighten the subframe mounting lower bolts (3) and subframe mounting upper bolt to the specified torque:  
upper bolt: 22 lbf·ft (30 N·m, 3.1 kgf·m)  
lower bolts: 36 lbf·ft (49 N·m, 5.0 kgf·m)
3. Check the hoses (4) for slack.

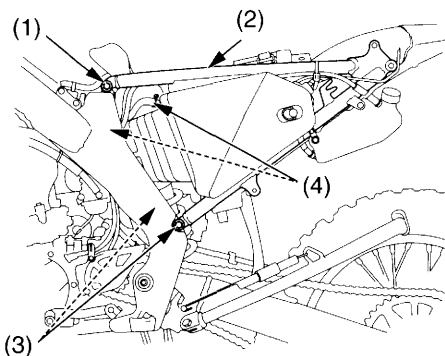


- (1) subframe mounting upper bolt
- (2) subframe
- (3) subframe mounting lower bolts
- (4) hoses

4. Tighten the screw (5) on the air cleaner connecting tube clamp (6).

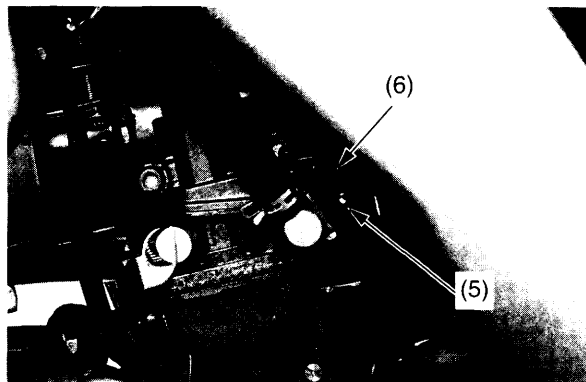

- (5) screw
- (6) air cleaner connecting tube clamp


5. Install the wire band (7).

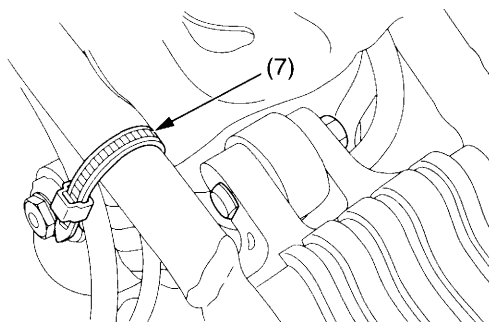

- (7) wire band


6. Install the muffler (page 63).

7. Install the seat (8) (page 36).
8. Install the left side cover (9), seat mounting bolt (10), collar (11) and left side cover bolt (12). Close the air cleaner housing cover (13) and turn the quick fastener (14) clockwise.

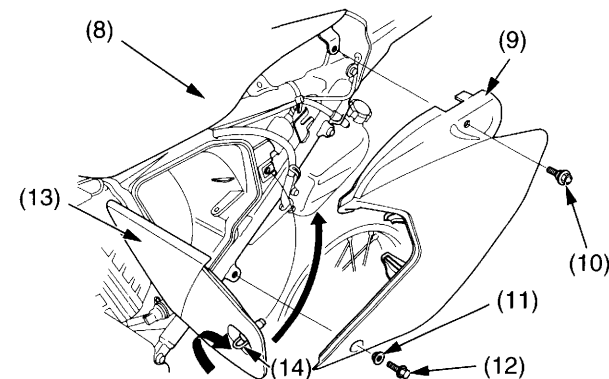

- (8) seat
- (9) left side cover
- (10) seat mounting bolt
- (11) collar
- (12) left side cover bolt
- (13) air cleaner housing cover
- (14) quick fastener

9. Install the right side cover (15), seat mounting bolt (16), collar (17) and right side cover bolt (18).

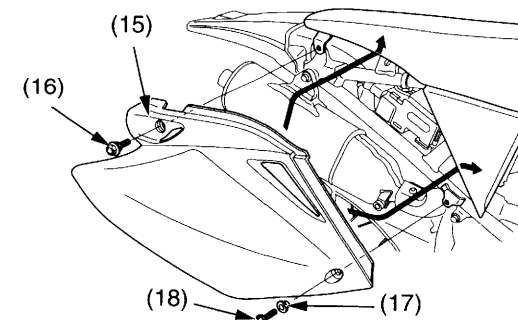

- (15) right side cover
- (16) seat mounting bolt
- (17) collar
- (18) right side cover bolt

10. Tighten the seat mounting bolts to the specified torque:  
19 lbf·ft (26 N·m, 2.7 kgf·m)