


Steering Lock (CT185: Optional part)

The motorcycle has a steering lock (1) on the steering stem under the headlight case. To lock the steering, turn the handlebar all the way to the steering stop, either to the right or left, insert the key in the lock, turn the key to the left and push in. Hold the key in and turn it to the right, then remove it. To unlock the steering, perform the locking sequence in the reverse order.

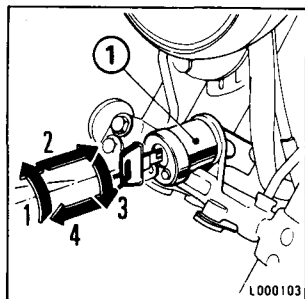

(CT185)

Bloqueador del Manubrio (CT185: Opcional)

La motocicleta está provista de un bloqueador del manubrio (1) en el vástago de dirección debajo de la caja de faro. Para bloquear la dirección, girar el manubrio completamente a la izquierda, inserte la llave en el bloqueador, gírela hacia la izquierda e introdúzcala. Manténgala introducida y gírela hacia la derecha, luego retírela. Para desbloquear la dirección, efectúe la operación de bloqueo en orden inverso.