

If you have a flat tyre, use the plug method to make temporary repairs. The plug method is the same as that for conventional tubeless tyres. A plug type repair kit, which is available at most auto part stores or service stations, provides a plug, an installation tool, tyre cement, and an instruction sheet. Follow the instructions provided in the repair kit to make a temporary repair until the tyre can be permanently repaired by the cold patch method. Any tyre which cannot be repaired by the plug method should be replaced.

Whenever the BIG RED is to be operated far from service facilities or available transportation, we recommend that the rider carry a tyre pump and a suitable tyre repair kit with the BIG RED.

Tyres Tread Condition


Measure the groove depth (1) of tyres at the center or check the wear indicator (2) on the tyre as shown. Operating the vehicle with excessively worn tyres will decrease traction and cause skidding.

⚠ WARNING

* *Replace tyres before tread depth at the center of the tyres reaches the minimum or if the tyre has wear indicators when the surface is flush with the wear indicators.*

Minimum tread depth

4mm (0.16 in)

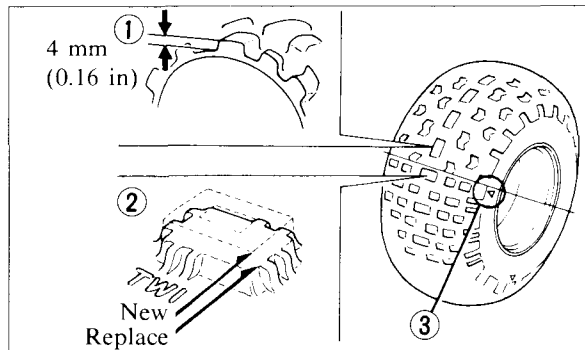

(1) Groove depth

(2) Wear indicator

(3) Wear indicator

location mark