


3. Remove the attaching bolt ⑤ at top of the each rear shock absorber, and rebolt the absorber through hole A. Tighten the bolt firmly.


NOTE: When returning the front fork legs to the normal position, align the alignment marks ④ (page 21) even with the upper surface of the fork top bridge.

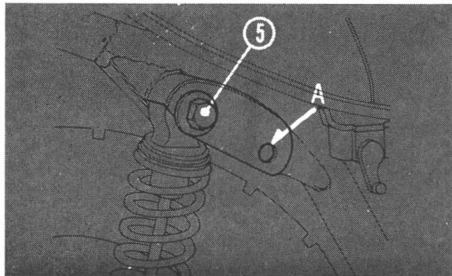

⑤ Attaching bolt

● Removing headlight

1. Raise the front side of the fuel tank, and disconnect the wire leads at the lead coupler ① and attach the rubber cap ② to the coupler.
2. Disconnect the wire leads running to the instruments.
3. Remove one headlight bracket attaching bolt ③ and two nuts ④.
4. Reinstall the two nuts if not removing the speedometer and tachometer.

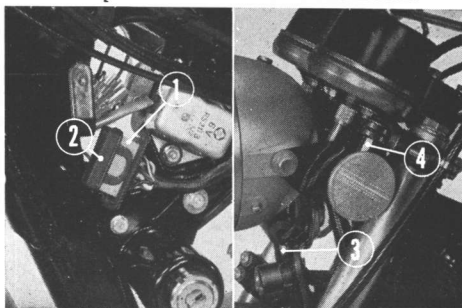

① Lead coupler
② Rubber cap

③ Attaching bolt
④ Nuts