




INSTALLATION


Place the handlebar into position, aligning the punch marks on the handlebar with top of the handlebar lower holders.

Install the handlebar upper holders with the punch marks forward.

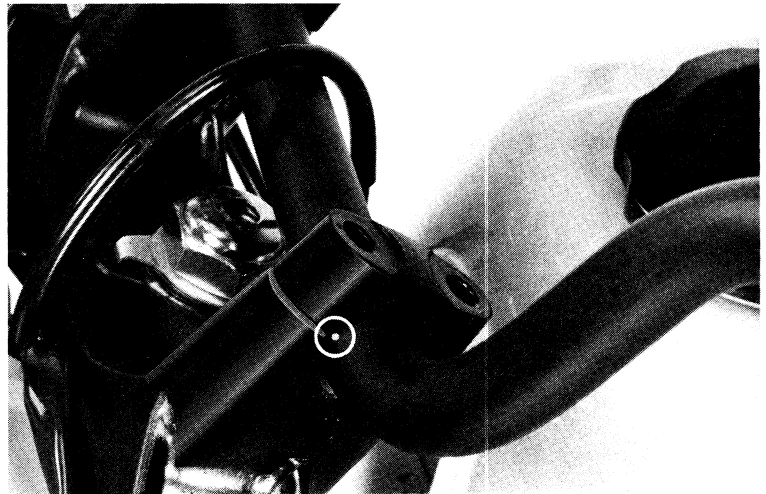

Tighten the front bolts to the specified torque first, then tighten the rear bolts to the same torque.

TORQUE: 18–25 N·m (1.8–2.5 kg·m,
13–18 ft·lb)

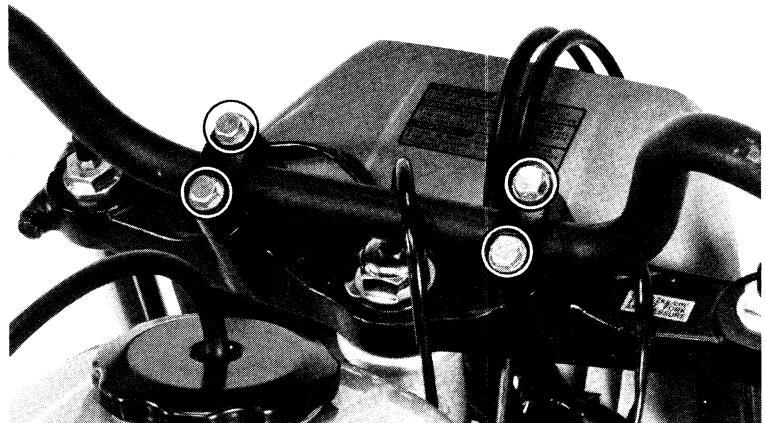

Position the throttle lever housing on the handlebar and install it using the throttle lever housing holder and two screws.

LEVER HOUSING

