


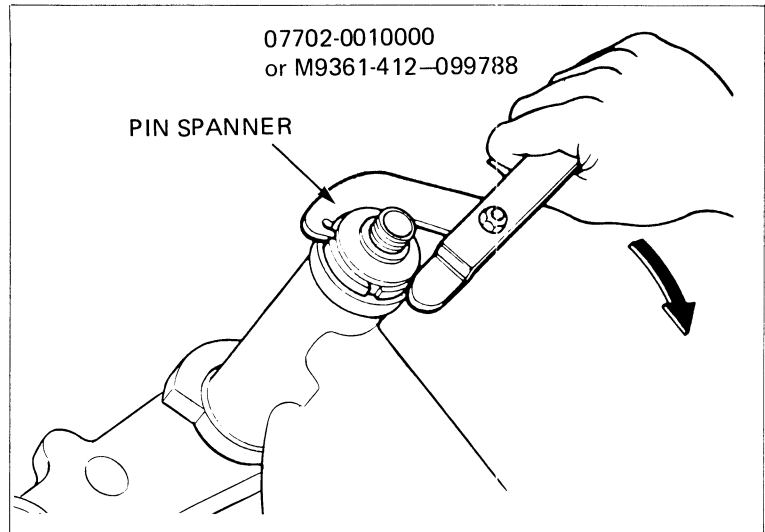

Tighten the top thread nut until snug against the top cone race and back off about 1/8 turn.

Check that the stem rotates freely without axial play.




Install the fork bridge.
Install the stem washer.
Tighten the steering stem nut.
Install the front fork tubes.

**TORQUE: 70–100 N-m (7.0–10.0 kg-m,
51–72 ft-lb)**

Tighten the fork tube pinch bolts.

**TORQUE: 18–25 N-m (1.8–2.5 kg-m,
13–18 ft-lb)**

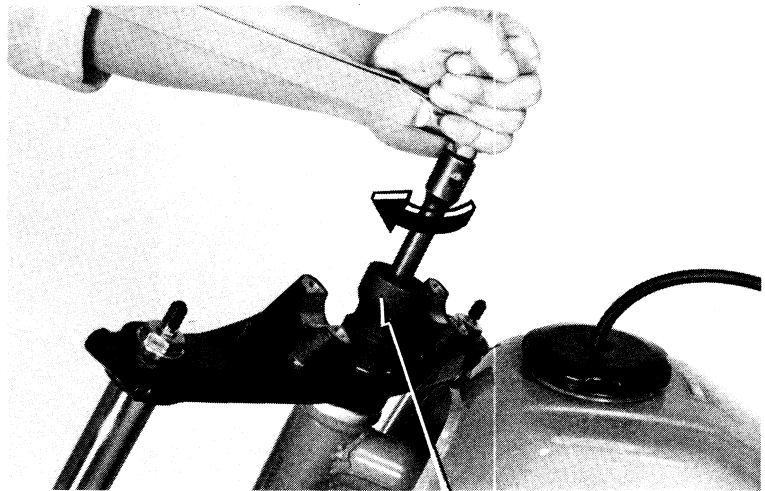

LOCK NUT SOCKET 30 x 32 mm
07716-0020400 or 07916-3310100 or equivalent

Install the front fender.
Install the front wheel.
Install the handlebar (Page 10-8).
Install the headlight case bracket.
Install the headlight.

