



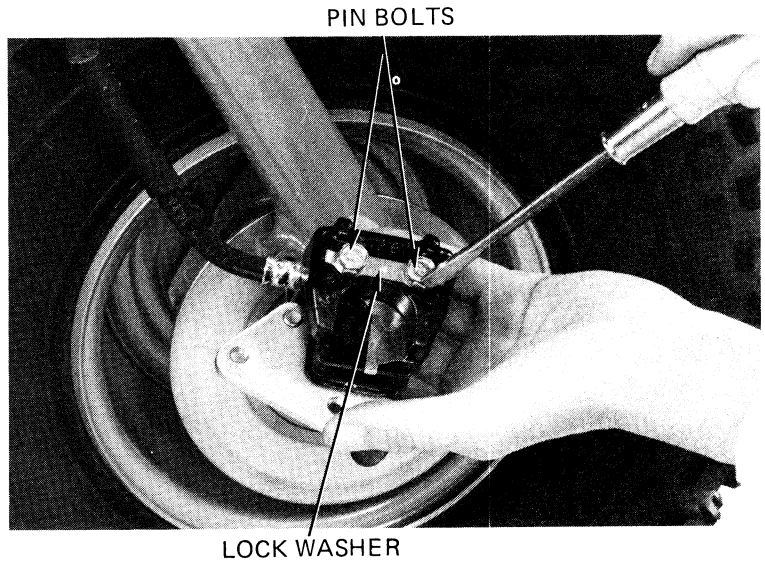

Straighten the tabs of the lock washer.
Loosen the two pin bolts.

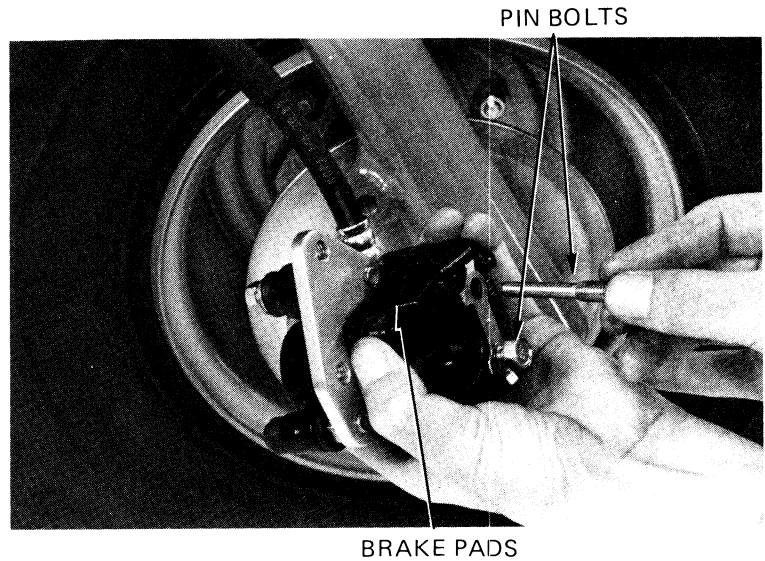

Remove the pin bolts and brake pads.



Clean the brake caliper.
Install the pad spring on the caliper.
Install the brake pads and shims on the caliper bracket.
Close the caliper bracket with the pads.
Install the pin bolts loosely.

NOTE

- Replace both pads as a set.
- Install the shim on the back of the pad.
- Place the caliper bracket between the tabs of the brake pad spring.

Tighten the pin bolts to the specified torque.

TORQUE: 15–20 N·m (1.5–2.0 kg·m)
11–14 ft·lb)

Install the caliper on the fork leg.

TORQUE: 18–25 N·m (1.8–2.5 kg·m,
13–18 ft·lb)

Install the 3 wheel nuts.

