



Install the brake arm.


NOTE

Align the punch mark on the brake cam with the punch mark on the brake arm.


Tighten the brake arm bolt to the specified torque.

**TORQUE: 8–12 N·m (0.8–1.2 kg·m,
6–9 ft·lb)**

Install the brake shoes in the brake panel.

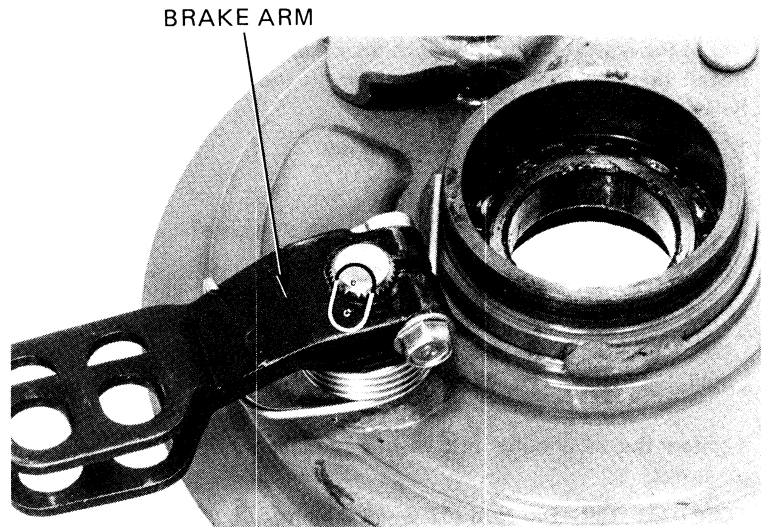

Install the brake panel on the rear axle.
Insert the rear brake and parking brake cables into the cable holder.
Connect the rear brake and parking brake cables to the brake arm with the brake adjusting nuts.

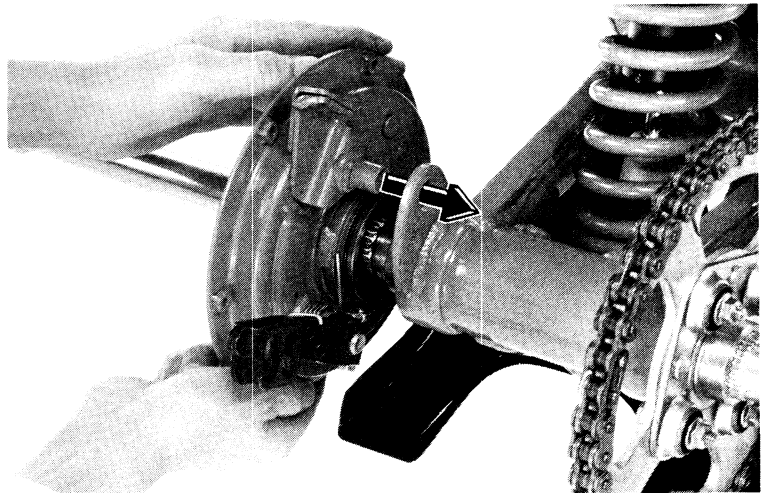

Coat the O-ring with grease and install it onto the axle.
Install the rear axle from the left side.

