





REAR SHOCK ABSORBER

REMOVAL

Remove the reservoir attaching bolts and reservoir.
Remove the rear shock absorber upper bolt.

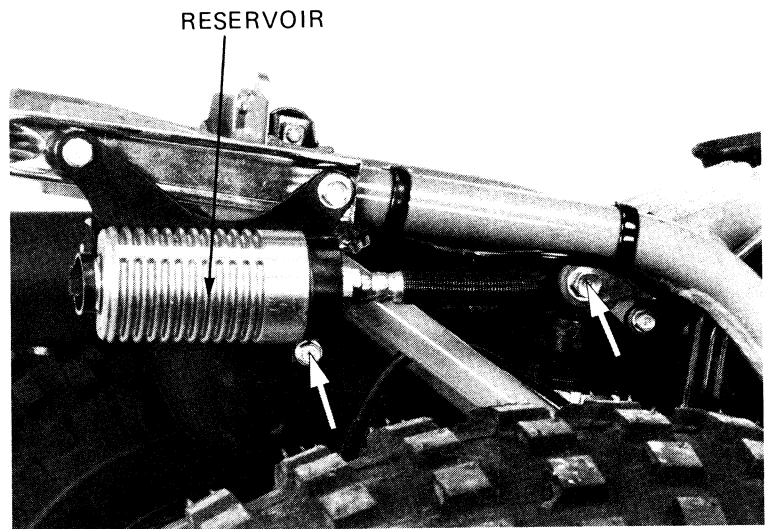

Remove the rear shock absorber lower bolt.

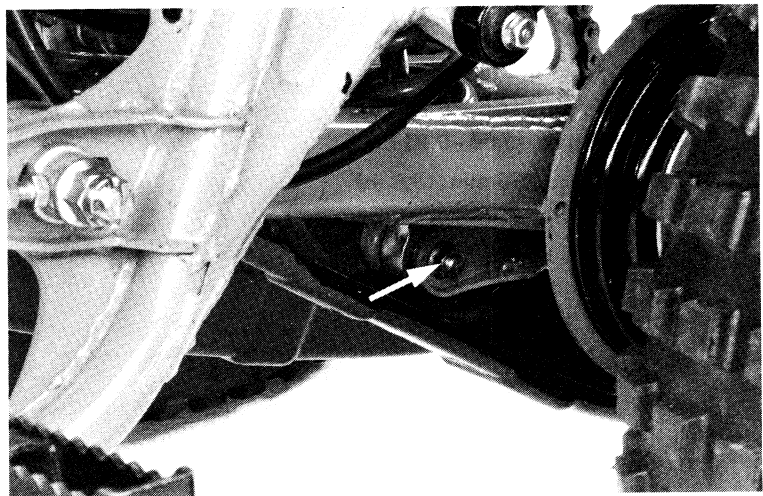

DISASSEMBLY

Hold the lower eye of the shock absorber in a vise with soft jaws.

Loosen the lock nut and adjusting nut.

CAUTION:

Be careful not to damage the hose connection in the vise.

NOTE

The pin spanners are optional tools.

