



3. Remove the nuts and the washers B.

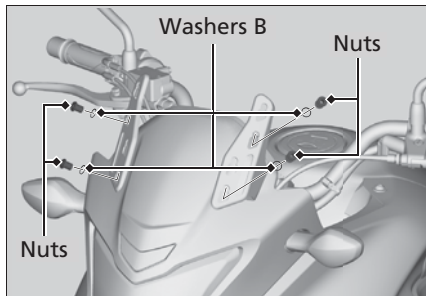

4. Set the all nuts and the washers B to the low position holes or high position holes.

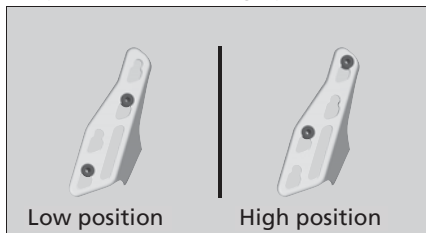

5. Install the windscreen.  
 6. Install and tighten the washers A and screws.  
 7. Install the upper side caps.  
 8. Make sure the installation order is the following illustration.

