


3. Set the all adaptors to the low position holes or high position holes.

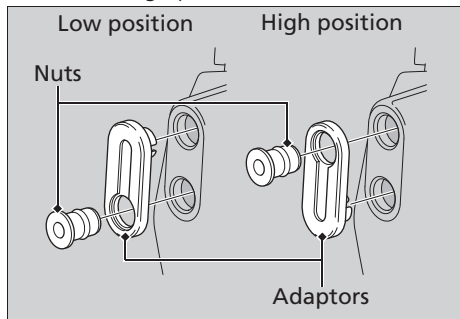

4. Install the nuts.
5. Install the windscreen.
6. Install and tighten the screws and washers.