
## **Reverse Inhibitor System Adjustment**

Refer to Safety Precautions on page 119.

## LEFT HANDLEBAR

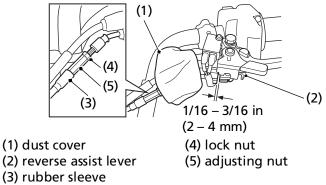

- 1. Turn over the dust cover (1).
- 2. Check the reverse assist lever (2) freeplay, measured at the reverse assist lever end near the cable:

1/16 - 3/16 in (2 - 4 mm)

- 3. To adjust, slide the rubber sleeve (3), loosen the lock nut (4) and turn the adjusting nut (5) to obtain the correct freeplay. After adjustment, tighten the lock nut securely.
- 4. Return the dust cover and rubber sleeve.

## Other Checks

Check the reverse assist lever and cable for loose connections or other damage. If the cable is worn or kinked, have it replaced by your dealer.