


Remove the O-ring from the insulator.


Seal the cylinder head intake port with a shop towel or cover it with a piece of tape to prevent any foreign material from dropping into the engine.

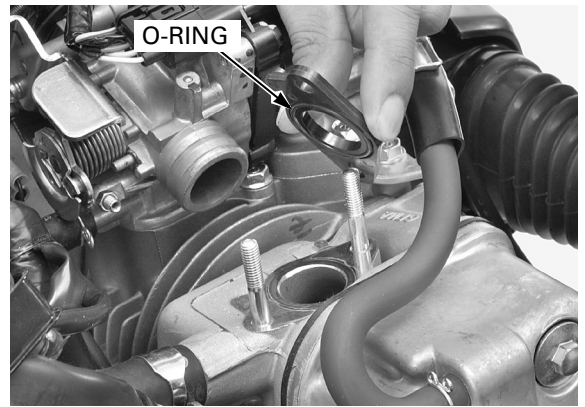

INSTALLATION

Install a new O-ring to the groove on the insulator.

Install the insulator by aligning the tab of insulator and groove of cylinder head.

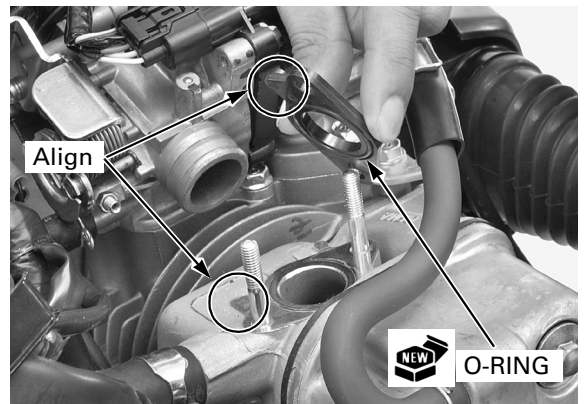

Install a new O-ring to the groove on the intake pipe.



Install the insulator band to the intake pipe.

Install the insulator band/intake pipe.

Install and tighten the intake pipe mounting nuts.

