



After bleeding air completely, tighten the brake caliper bleed valve to the specified torque.

TORQUE: 5.4 N·m (0.55 kgf·m, 4.0 lbf·ft)

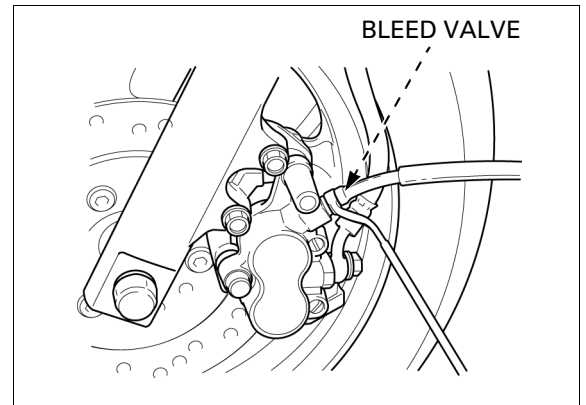

Fill the master cylinder reservoir with DOT 3 or DOT 4 brake fluid from the sealed container to the upper level.

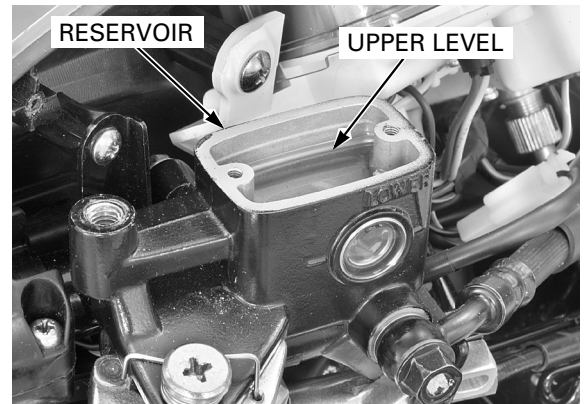

Install the diaphragm and diaphragm plate. Install the reservoir cap and tighten the screws to the specified torque.

TORQUE: 1.5 N·m (0.15 kgf·m, 1.1 lbf·ft)

Install the front handlebar cover (page 3-6).

