

4. When the oil has been completely drained, reinstall the drain plug. Be sure the washer which seals the drain plug is in good condition.
5. Fill the crankcase through the oil filler opening with approximately 0.8 liter (0.8 U.S. qt.) of recommended grade of motor oil.


Make sure that the oil level is between the upper and lower level marks. If the level is low, add oil.

**NOTE :**

**Vehicles ridden in unusually dusty areas require oil changes at more frequent intervals than specified in the MAINTENANCE SCHEDULE.**

## **BRAKE ADJUSTMENT**

Free play, measured at the tip of the brake lever ①, should be maintained at 15~20 mm (0.6~0.8 in.).

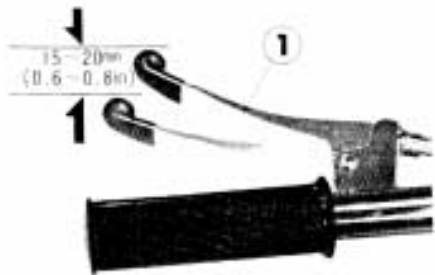

① Brake lever