


## DRIVE CHAIN LUBRICATION

The drive chain can be lubricated through the hole in the side of the drive chain case. This hole is covered with a rubber plug which excludes dirt from the chain case. Be sure to reinstall the plug after lubrication.

Commercially prepared drive chain lubricants may be purchased at most motor-

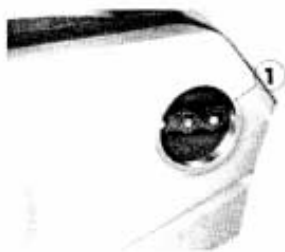

① Drive chain

cycle dealerships and should be used in preference to motor oil for lubricating the drive chain.

---

## VALVE TAPPET ADJUSTMENT

Valve tappet clearance should be maintained at 0.05mm (0.002 in.). Excessive clearance will cause tappet noise. Insufficient clearance will cause loss of power and valve damage.

Valve tappet clearance must be checked when the engine is cold.

1. Remove the recoil starter and tappet adjusting hole caps.