

## **IDLE SPEED**


Refer to the Safety Precautions on page 65.

The engine must be at normal operating temperature for accurate idle speed adjustment. 10 minutes of stop-and-go riding is sufficient.

Do not attempt to compensate for faults in other systems by adjusting idle speed. See your dealer for regularly scheduled carburetor adjustments.

- 1. Warm up the engine, shift to neutral and place the motorcycle on its center stand.
- 2. Adjust idle speed with the throttle stop screw (1).

Idle speed (In neutral):  $1,400 \pm 100 \text{ min}^{-1} \text{ (rpm)}$ 

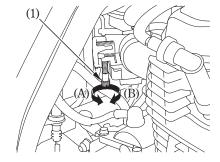

- (1) Throttle stop screw
- (A) Increase (B) Decrease

