


3. Free play is **0.8–1.2 in. (20–30 mm)**.

If adjustment is necessary, make the adjustment by turning the rear brake adjusting nut ④.

Turn clockwise for less free play, counterclockwise for greater free play.

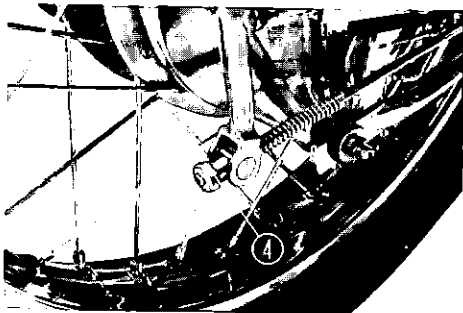

④ Rear brake adjusting nut

Wear indicator:

When the rear brake is applied, a red arrow ③, adjacent to the rear brake arm ④, moves toward a red reference mark ② on the rear brake backing plate ①. The distance between the arrow and the reference mark, on full application of the rear brake, indicates brake lining thickness.

If the arrow aligns with the reference mark on full application of the rear brake, the brake shoes should be removed and inspected for wear. Replace the brake shoes, if the thickness of the lining is **0.08 in. (2.0 mm)** or less.

On the CB360 (drum brake type), the wear indicator is provided in both wheels.

NOTE:

- When brake service is necessary, see your authorized Honda motorcycle dealer. When replacing brake shoes, install only genuine Honda parts.