


toward the left side of the rider and turning the screw out will focus the beam toward the right side. Adjust the beam to coincide with the center line of the motorcycle.

CAUTION: Adjust the headlight beam as specified by local laws and regulations.

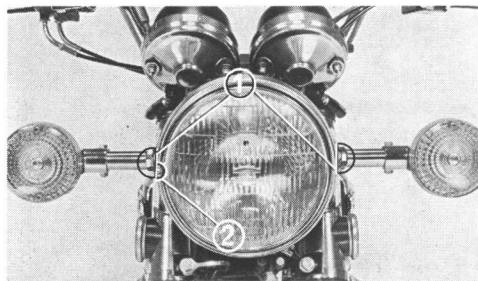


- ① Headlight mounting bolts
- ② Adjusting screw

● Stop Light Switch Adjustment

The stop light switch adjustment is made at the stop light switch ① located on the right side toward the rear of the engine.

- a. First check the adjustment of the rear brake pedal in accordance with the procedure on page 59 to make sure that the brakes are properly adjusted.
- b. Turn on the main key switch (ignition position "Red" dot)
- c. Adjust the stop light ① so that the stop

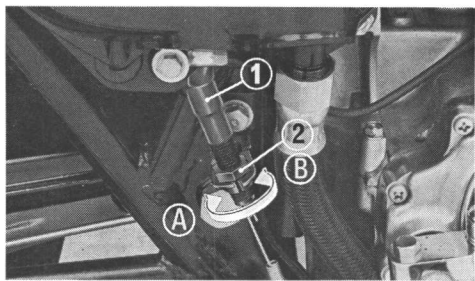

- ① Stoplight switch
- ② Adjusting nut