

NOTE:

- * Please dispose of used engine oil in a manner that is compatible with the environment. We suggest you take it in a sealed container to your local recycling center or service station for reclamation. Do not throw it in the rubbish or pour it on the ground.

CAUTION:

- * Used engine oil may cause skin cancer if repeatedly left in contact with the skin for prolonged periods. Although this is unlikely unless you handle used oil on a daily basis, it is still advisable to thoroughly wash your hands with soap and water as soon as possible after handling used oil.

SPARK PLUGS

(Refer to the maintenance precautions on page 54).


Recommended plugs:

Standard:

DPR9EA-9 (NGK) or

X27EPR-U9 (NIPPONDENSO)

1. Remove the seat (see page 38).
2. Remove the fuel tank front mount bolts (1) and bracket.

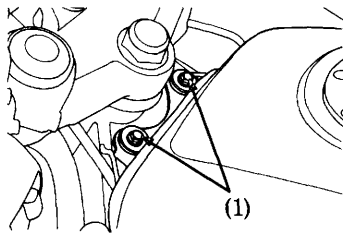

(1) Mount bolts