


Measure the clearance (6) between each surface of the left brake disc (7) and the left caliper holder (8) with a 0,7 mm (0,028 in) feeler gauge (9) (see illustration).

If the gauge inserts easily, tighten the right and left axle pinch bolts (3) to the specified torque.

Axle pinch bolt torque :

22 N·m (2.2 kg-m , 16 lb-ft)

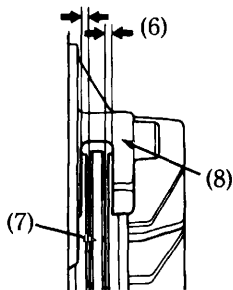


(6) Clearance
(7) Brake disc

(8) Caliper holder

▲ WARNING

*** If a torque wrench was not used for installation, see your authorized Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.**

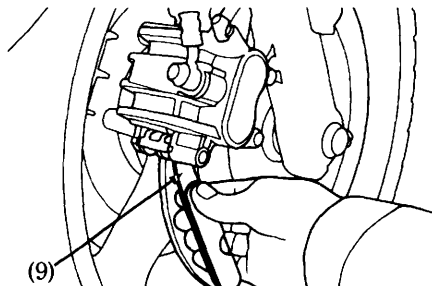

(9) Feeler gauge